



Bubble Level


Make sure it is level  
Use a pen to mark of the locations

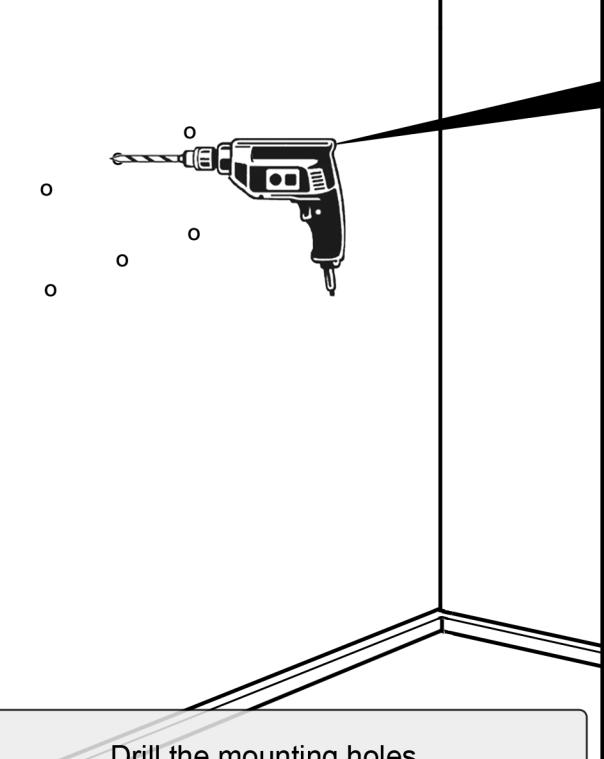


Drill the mounting holes.

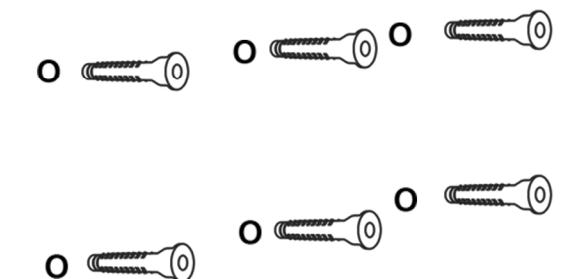


Insert the wall anchors\* to the wall and tap them flush with a hammer.  
\* Never use wall anchors on drywall.

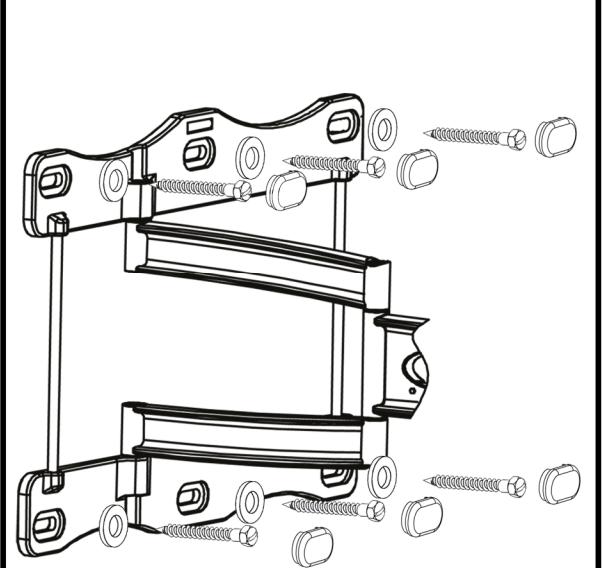


Fix the plate to the wall.

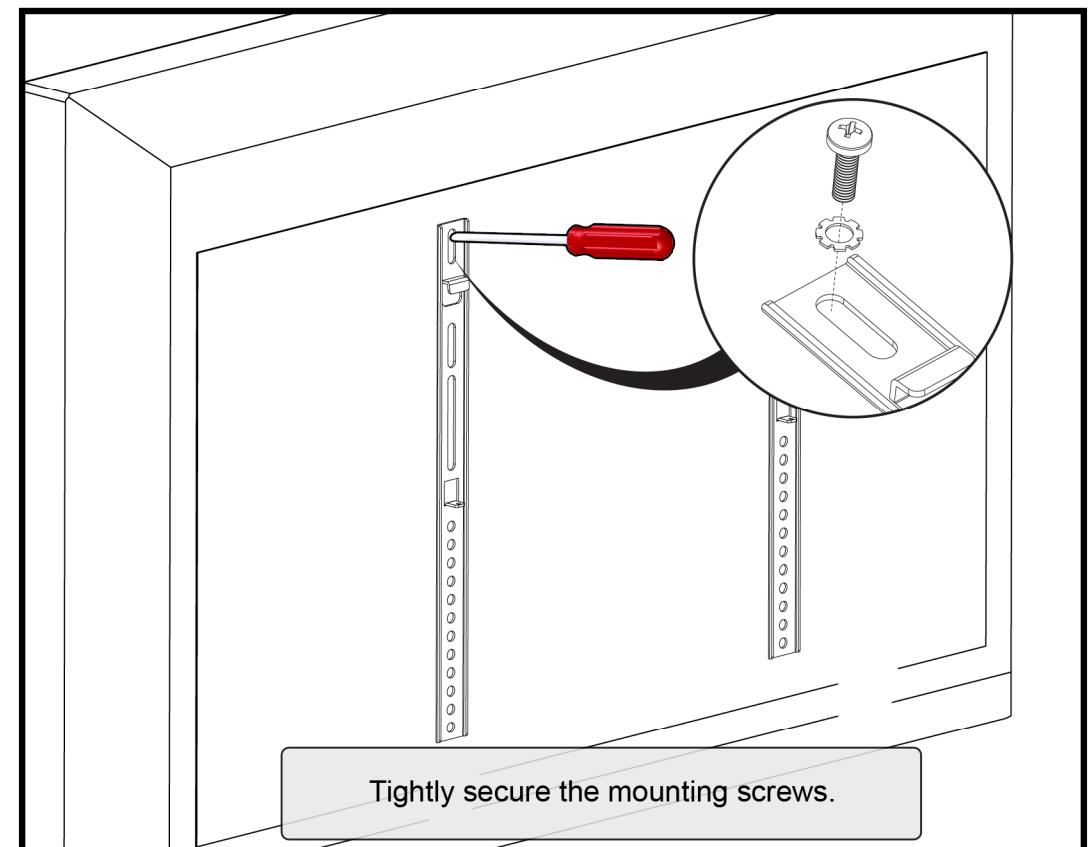


Tightly secure the mounting screws.

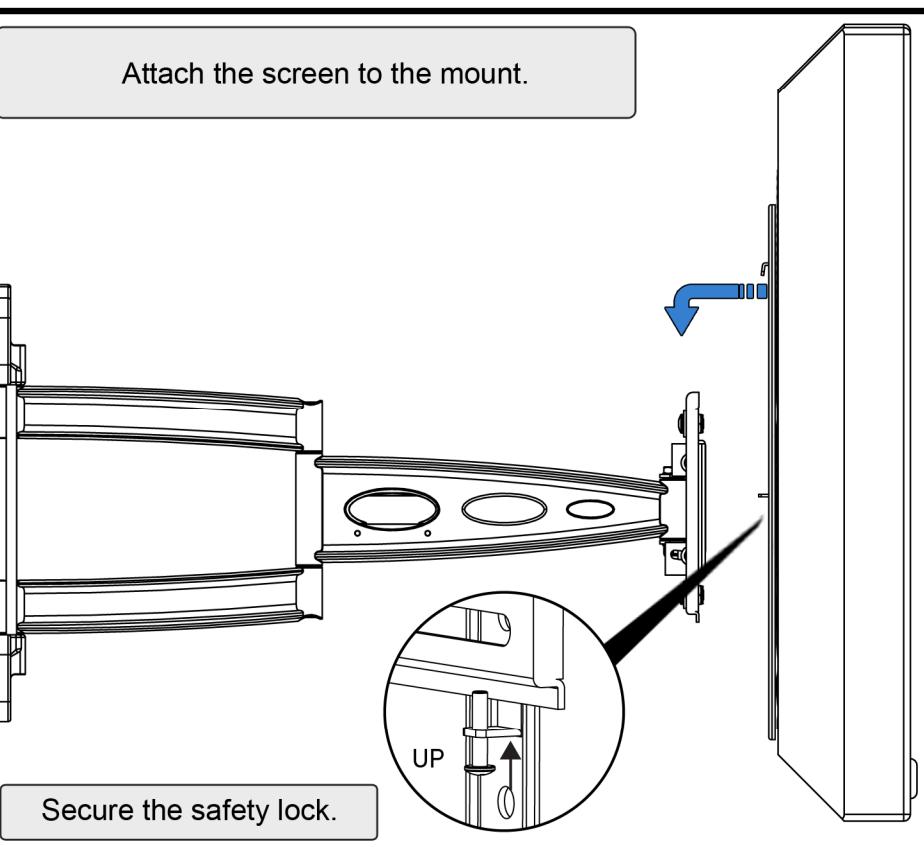

Attach the screen to the mount.

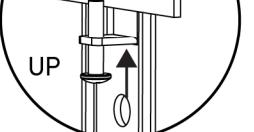

Secure the safety lock.

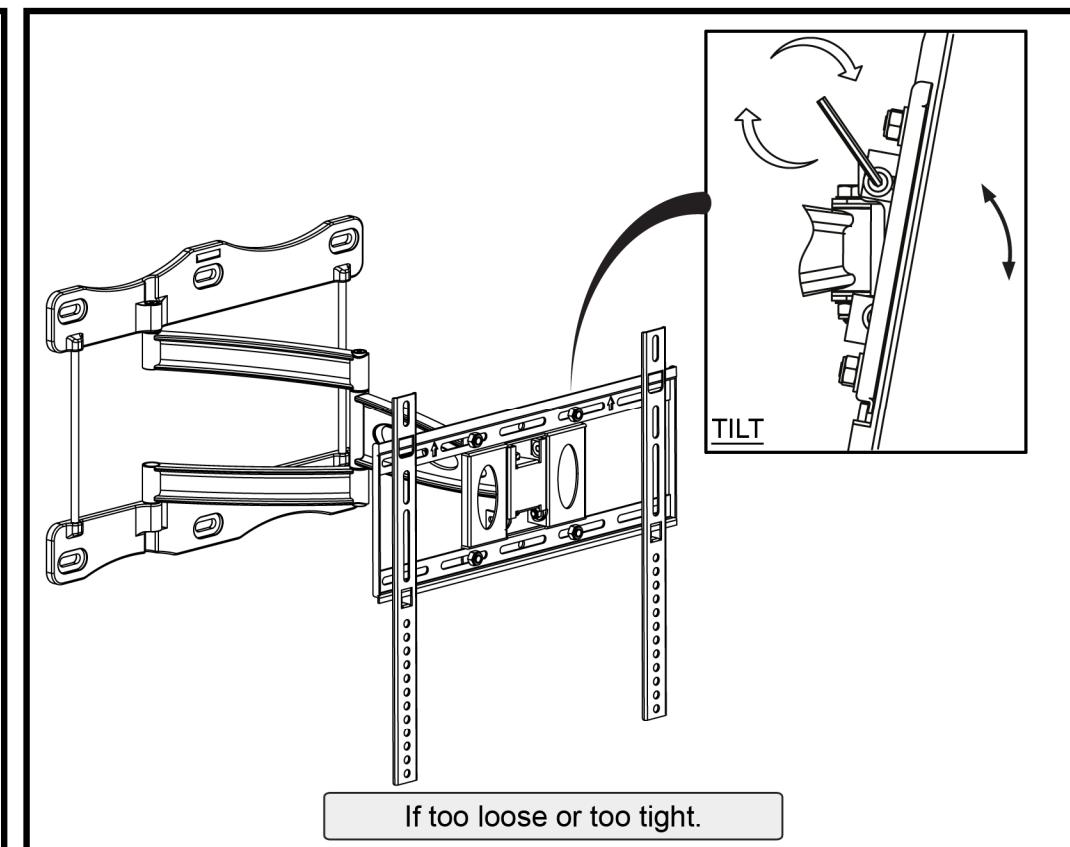


If too loose or too tight.

## HARDWARE KIT



x6

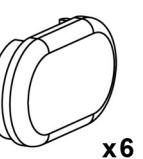

x6



x6

M6x12



x4

M6 x4

M8x12



x4

M8x25



x4

M8 x4

 SONOROUS®  
SOUND AND VISION IN STYLE