



Level the mount and mark.

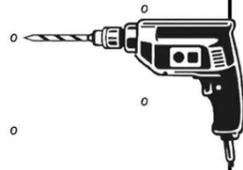


Drill the mounting holes.

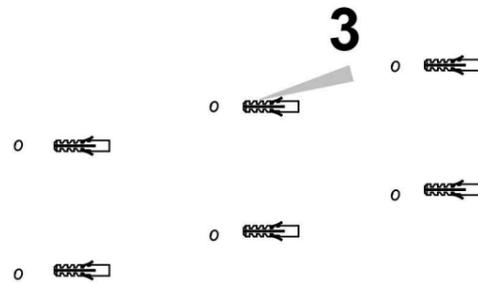


Insert the wall anchors\* to the wall and tap them flush with a hammer.


\* Never use wall anchors on drywall

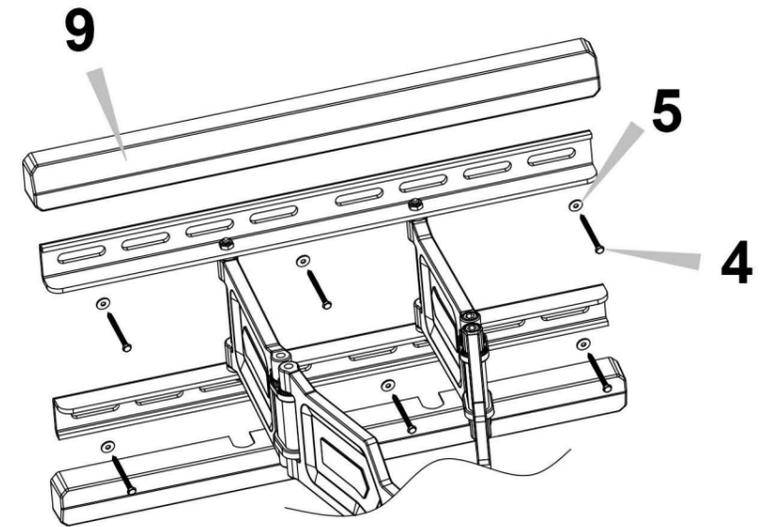

Fix the plate to the wall.

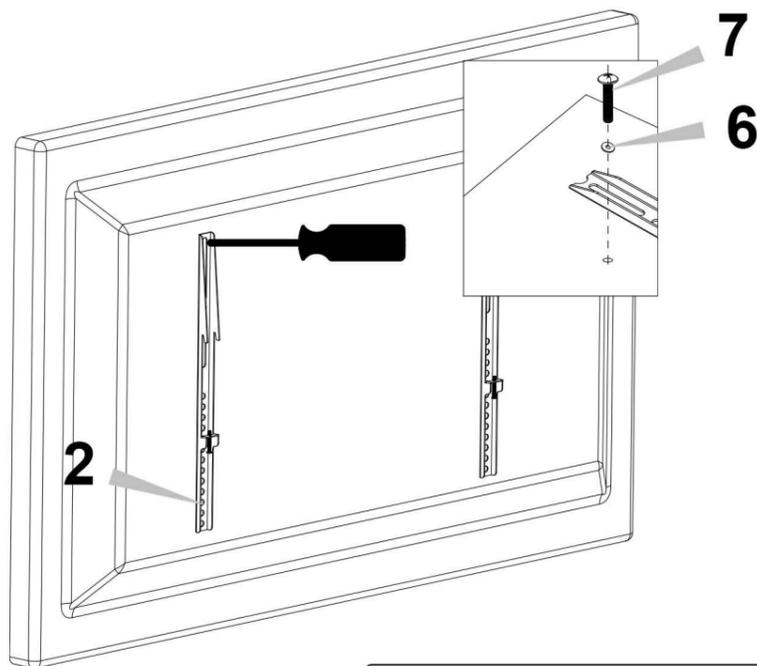

Attach mount to the screen.

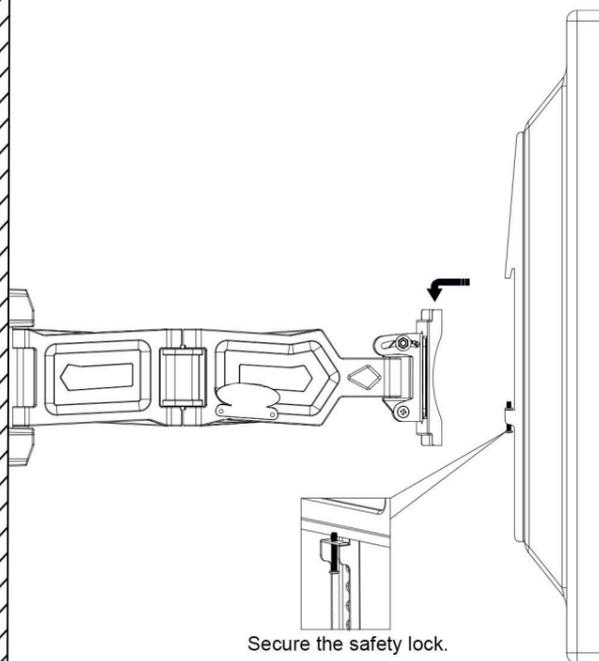




Secure the safety lock.

Mount screen to the body.


SWIVEL

ROTATE


TILT

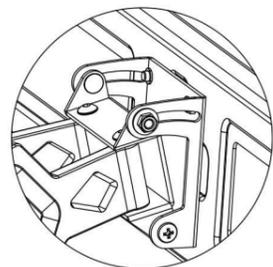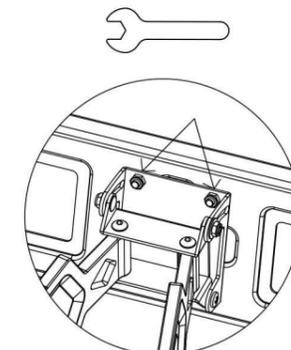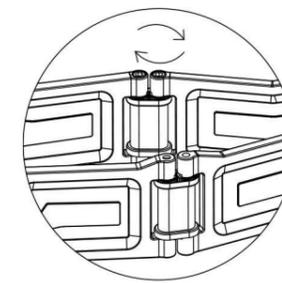

If too loose or too tight.

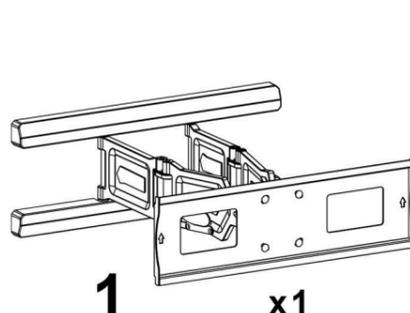


1 x1

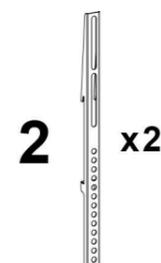

2 x2




3 x6



4 x6




5 x6

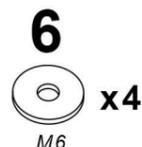

6 x4  
M6




M4x12 x4 M6x12 x4

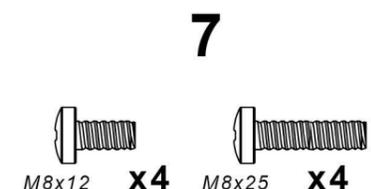

M8x12 x4 M8x25 x4



8 x1



9 x2

